

Product : Home Theater System	Bulletin No. : 03-Audio-0008
Model : HT-DB120	Bulletin Date : 2003-12-11
Buyer : All Buyers	ECN Date : 2003-12-11
SUBJECT : Countermeasure of Adding VCD playback funtion	


Background : When playing back an VIDEO CD DISC(VCD), do not play your VCD
(Symptom)

Solution : How to Playing back an VCD.
>Just delete Location No XD11(1SS355) of Front PCB in status of " POWER OFF"

- 1) Main u-com reset
 - > press the STOP button during 7 second in status of standby.
" standby RED LED in the twinkling "
- 2) MPEG reset.
 - > Press the STOP button during 7 second in status of " NO DISC"
" initial mode > Auto shut down"

Chack point : Playing your Video Cd Disc

Application Date : Immediately

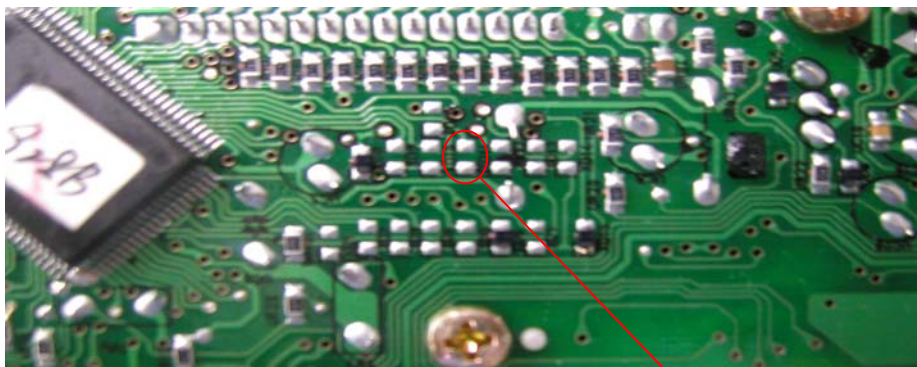

DIODE METRIX Location NO(XD11 Delete)

(Interchangeability Code : * I.C)			
Application	Reference ()	Only Defected sets (O)	Whole sets ()
Attachment	Schematic Diagram ()	Component Lay-out ()	Exploded View ()
	Mechanical Diagram ()	None ()	Others (o)
Product Month :		Serial No. (~ from)	
Published by :	Y.G.KIM	Checked by : Y.G.KIM	Approved by : Y.G.KIM

